

CLEANING INSTRUCTION FOR PHYSICAL CONTACT TECHNOLOGY

CLEANING SET ORDER NO. 50294686

consists of

- 1 pc. click cleaner
- 1 pc. cleaning instruction

STEP BY STEP INSTRUCTION

CLEANING MUST BE DONE BEFORE EVERY MATING CYCLE.

1. CLEANING THE MALE CONTACT

1.1



Remove the protection cap from the cleaner and put on the centering sleeve with the laser engraving „male“.

1.2



Insert the cleaner into the connector.



CLEANING MUST BE DONE BEFORE EVERY MATING CYCLE.



1.3

Press until it clicks once.




2.2

Insert the cleaner into the receptacle.
It is important to apply the cleaner centrally.



1.4

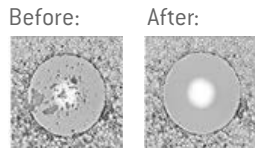

Before: After:



2.3

Press until it clicks once.
Remove the centering sleeve from the cleaner and put on the protection cap.

2. CLEANING THE FEMALE CONTACT




2.1

Put on the centering sleeve with the laser engraving „female“.



2.4

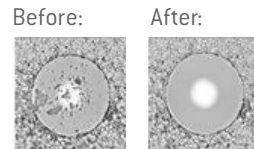

Before: After:

IMPORTANT NOTES

Always clean both sides of the connector. By mating a dirty contact with a clean one you will pollute both.

Please make sure to use the matching centering sleeves for the respective contacts (male and female). Otherwise, the connector is destroyed.

Also clean the standard fiber optic connectors on the other side of the connection system (with a standard ferrule cleaning procedure).

ORDER THE CLEANING SET:

**CLICK CLEANER
OCC Ø 1.25:
ORDER NO. 50294686**



Further information at
www.odu-connectors.com

All dimensions are in mm. Some figures are for illustrative purposes only. Subject to change without notice. Errors and omissions excepted. We reserve the right to change our products and their technical specifications at any time in the interest of technical improvement. This publication supersedes all prior publications. This publication is also available as a PDF file that can be downloaded from www.odu-connectors.com